


Great Company Great People

**X**CUTE 125

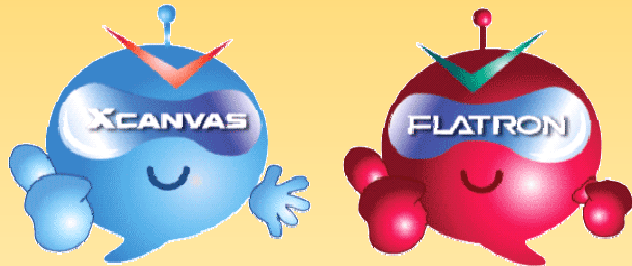


**LG Electronics**



**US LCD DCR**

**Memory Card Software Download**


## Step 0. Environment for download

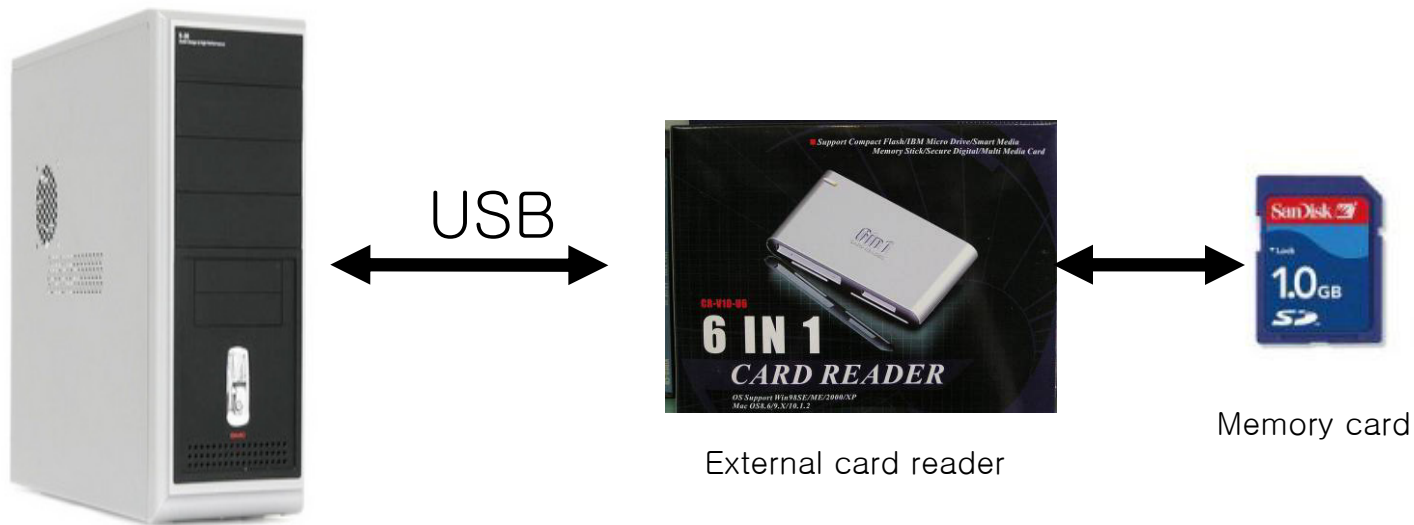

1) Insert a memory card into a card reader attached to your PC.

Refer to user manual for the TV for a list of supported memory cards, but most types are accepted.

# Step 1. Copy the download file to the memory card.

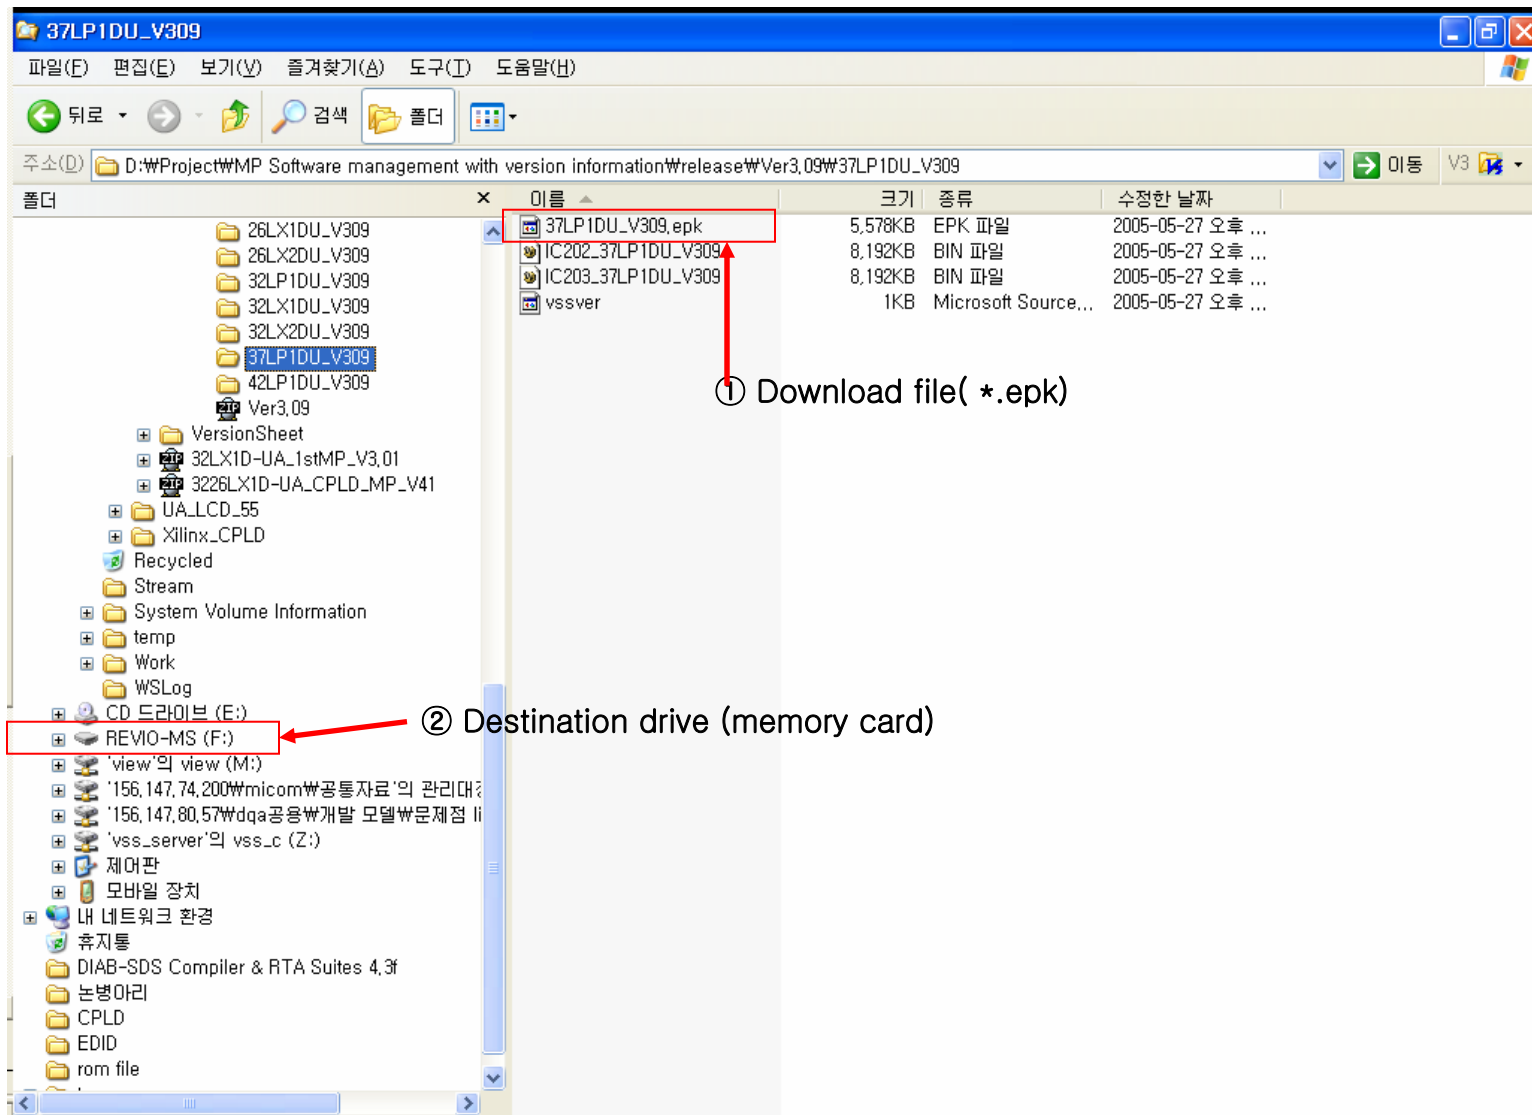


Step 2. Insert the memory card to the slot of the set.




① SD Card

② Memory Card Slot  
Memory Card Slot  
(For Xstudio mode)

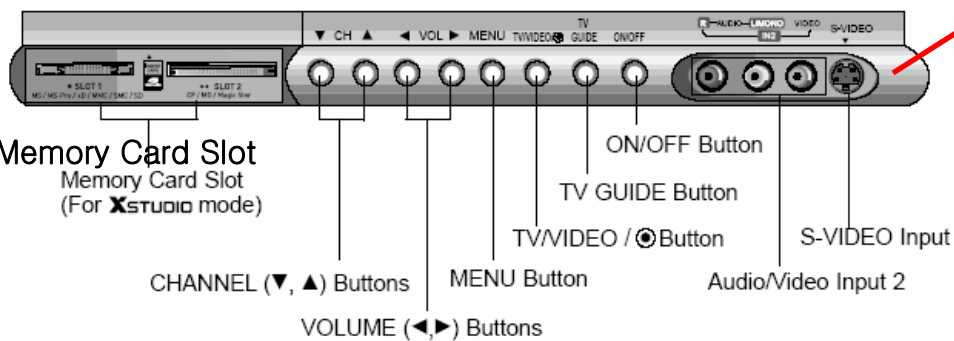

TV Set will display messages as below :

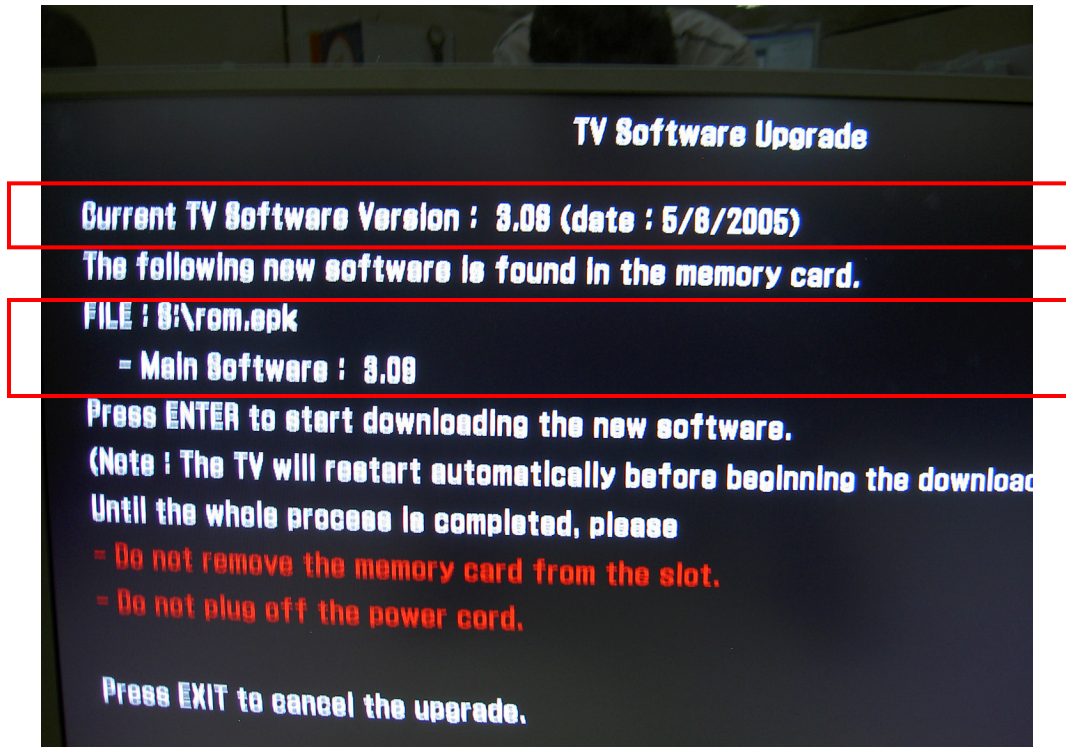


① Current CPU code version of TV set

② Download file name in memory card & CPU code version

These messages are displayed automatically for the following case :  
– The current version of the CPU code is lower than that of memory card.


## Step 3. Press the ENTER key in remote controller

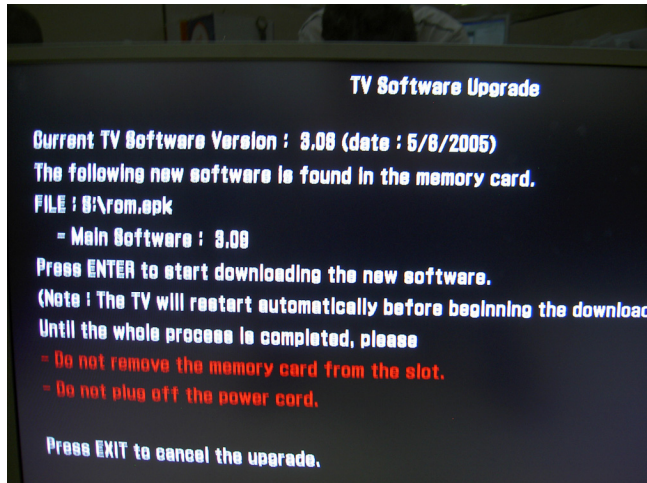

① Enter key

② If you press the Enter key, the screen is blank status for a few seconds.

TV Set will display messages as below :

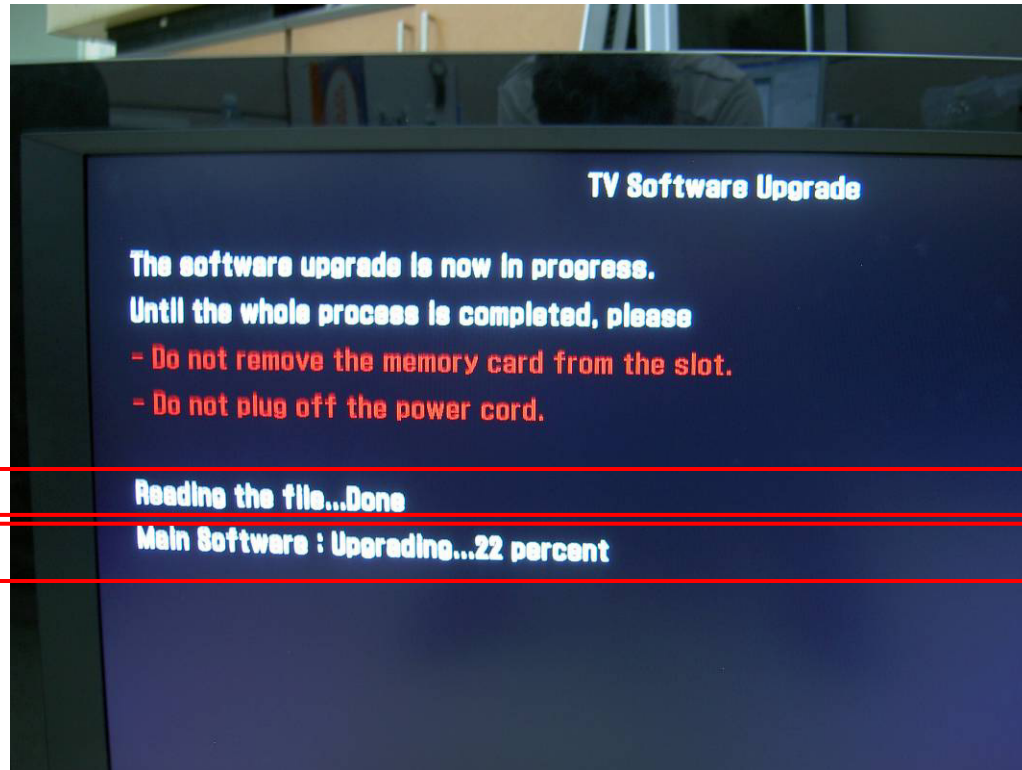

① Finished


② Upgrade rate

– We recommend that memory card should not be ejected during software upgrade operation.

–If you want to upgrade several TV sets with one memory card, you can eject memory card form Memory Card Slot when displays upgrade rate such as “Upgrading...2 percent”.



# Upgrade complete

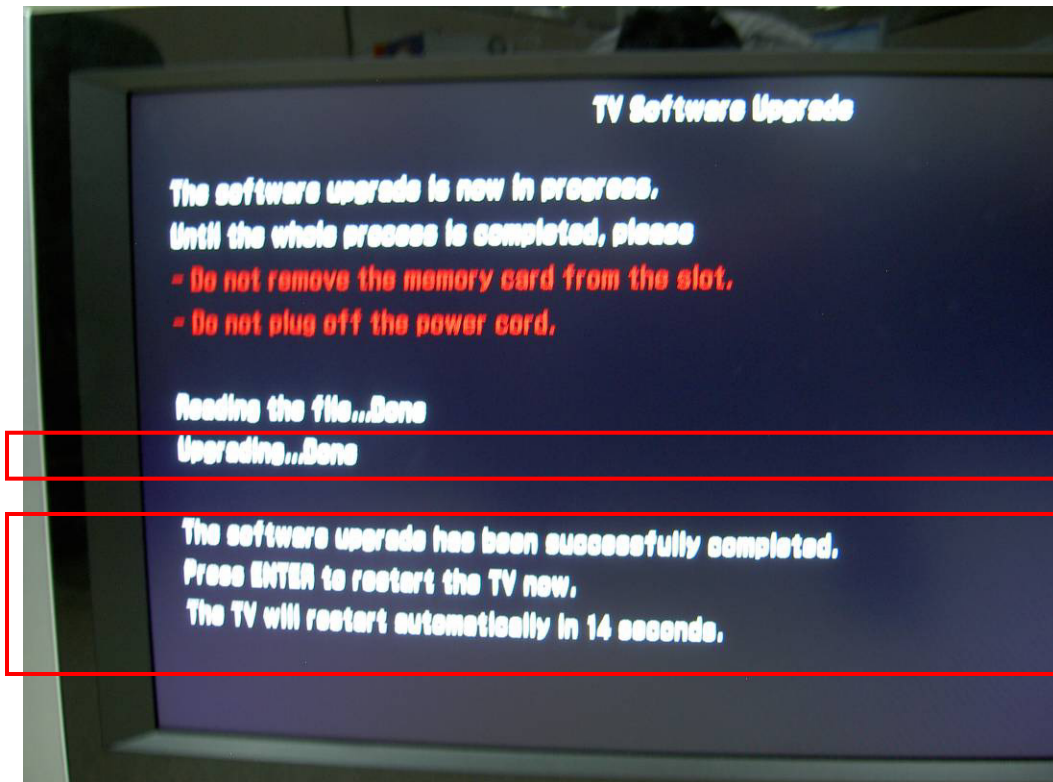

① Upgrade Done

② Restart after 14 seconds

TV display will show ①, ② message when upgrade complete.

TV system will restart when press enter key on the remote controller

If you doesn't press enter key, the system will restart after 14 second.

Thus whole software upgrade process will finish.